FRIGIDAIRE GALLERY

# Multi-Door Refrigerator

## Quick Start Guide


See your online User Manual for more information

## Getting Started

### 1. Set up your refrigerator

- Remove tape and glue residue and clean surfaces before turning on the refrigerator.
- If you are using your refrigerator in a kitchen, we recommend you set your temperatures at 37˚F (3°C) for the fresh food compartment and 0˚F (-18°C) for the freezer. Allow 24 hours for unit to stabilize and reach the desired temperatures. After 24 hours, you can adjust the control as desired, allowing the temperature to stabilize.

  Press **REFRIGERATOR** to adjust to the desired temperature setting inside the refrigerator compartment and **FREEZER** to adjust to the desired temperature setting inside the freezer compartment. **Temp F-C** allows you to switch between Fahrenheit (°F) and Celsius (°C).

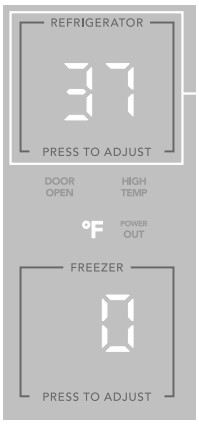


### 2. Keep your refrigerator fresh

- More powerful than baking soda, **PureAir® RAF-1™ Air Filter** absorbs undesirable smells keeping your fridge fresher for up to 6 months.
- Extend the life of fruit and vegetables with **PureAir PK-2 Produce Keeper Plus™** reducing food waste and saving money.

### 3. Prime the water supply system for your PurePour™ Water Filter

After installing your water and air filters, be sure to prime the water supply system before dispensing water for the first time. If you do not flush the system, the first glasses of water may be discolored or have an odd flavor.

- Hold a glass against the paddle for about 4 minutes to purge air from the system.
- Continue dispensing at least 1 full gallon (3.78 L) of water and discard.

**We recommend replacing filters at least once every 6 months.**

## FAQs

**My refrigerator is making unfamiliar sounds. Is this normal?**
Your new, high-efficiency unit may introduce unfamiliar sounds. These sounds normally indicate your appliance is operating correctly. See the **NORMAL OPERATING SOUNDS** section of your online Use and Care Manual for more information.

**How do I use the water dispenser?**
Your water dispenser is located in the left hand side of the refrigerator. To use the dispenser simply hold your glass against the paddle and press to dispense water.

**Why does my refrigerator seem to run continuously?**
Your variable speed compressor is designed to run 100% of the time except during the defrost cycle. At times it will run faster, such as after a defrost cycle.

## Register to Win $10,000

Take the first step to becoming a part of the Frigidaire family and discover more benefits by registering your multi-door refrigerator on Frigidaire.com.

## We're Here to Support

Have peace of mind knowing Frigidaire is here to always keep your appliance in peak performance.

- **Total Appliance Protection:** Extend your manufacturer's limited warranty to ensure you are always protected from surprises, including up to $250 of food-loss coverage and a worry-free guarantee we'll replace what we can't repair.
- **Frigidaire Expert Service:** Ever in need of service or repair? Our trusted Frigidaire-trained technicians are experts on your appliance and can provide reliable service and repair work.

Learn more and receive exclusive discounts here:

A27777701 (1223)

We are
**here for you!**

Visit
**frigidaire.com • frigidaire.ca**
for owner support