LG SIGNATURE

WM9998HBA

LG SIGNATURE 5.8 cu ft. Smart Front Load Washer & Dryer Combo

KEY FEATURES

- 5.8 cu.ft. Capacity
- TurboWash® 360 Technology
- TrueBalance® Anti-Vibration System
- EZ Dispense
- 31 Wash Programs
- Steam Technology





Control Panel



Dispenser



LG ThinQ® App

PRODUCT FEATURES

SUMMARY	
Capacity (cu.ft.)	5.8 cu.ft.
Matching Electric Dryer	DLEX9900B
Matching Gas Dryer	DLGX9901B
Color	Brushed Black Steel
ENERGY	
ENERGY STAR® Most Efficient	Yes
ENERGY STAR® Certified	Yes
CEE Tier	Tier 3
IMEF	3.2
IWF	2.6
CEF	7.6
APPERANCE	
Touch Buttons	Yes
LCD Display	Yes
WASH PROGRAM	
Number of Programs	31 Normal, AI Wash & Dry, Quick Wash, Timed Dry, Heavy Duty, Bedding, Towels, Jeans, Delicates, Perm. Press, Allergiene™, BrightWhites™ Sanitary, Overnight Care, Rinse & Spin, Spin Only, Activewear, Hand / Wool, Air Dry, Quick Tub Rinse Tub Clean, Small Load, Large Load, XL Load, Kids Wear, Color Care, Sweat Stains, Swimwear, Dresses, Down Jacket Refresh, Blanket Refresh
WASH OPTION	
Number of Options	20 TurboWash®, Steam, Wrinkle Care, Pre-wash, Remote Start, Delay Start, Wi-Fi, Extra Rinse, Control Lock, Drum Light, Cold Wash, Detergent Level, Softener Level, Signal, Cycle List Edit, Cycle Optimization, Softener Tank Use, Damp Signal, Dry Start Signal, Pre-dry Spin

WASH DETAILS	
No. of Wash/Rinse Temps	5
	Extra Hot, Hot, Warm, Cold, Tap Cold
No. of Spin Speeds	5
	Extra High, High, Medium, Low, No Spin
MAX RPM	1300
Water Levels	Load Sensing
No. of Soil Levels	5
DRY DETAILS	
Dry Mode	Energy, Normal
No. of Dry Mode	2
Dry Level	Damp, Normal, Very
No. of Dry Level	3
Dry Time	20, 30, 40, 50, 60, 70, 80, 90, 100, 110, 120, 130, 140, 150, 160, 170, 180, 190, 200, 210, 220, 230, 240
No. of Dry Time	23
FABRIC CARE FEATURES	
AI DD®	Yes (2.0)
TurboWash® 360 Technology	Yes
TurboWash® Technology	Yes
Steam Technology	Yes
Allergiene® Cycle	Yes
Sanitary Cycle	Yes
Cold Wash Option	Yes
Soil Level Sensor	Yes
CONVENIENCE FEATURES	
TrueBalance® Anti-Vibration System	Yes
Dispenser	ezDispense cartridge (Detergent, Softener)
End of Cycle Signal	Yes
LoadSense	Yes
Control Lock	Yes
Auto Suds Removal	Yes
Leveling Legs	4 Adjustable Legs
Drumlight	Yes
ezLintFilter™ Plus	Yes
Auto Cleaning Condensor2.0 (with Jet Spray)	Yes

SMART FEATURES (THINQ® TECHNOLOGY)	
Smart Diagnosis (v3.0)	Yes
Wi-Fi	Yes
ThinQ Care	Yes
ThinQ UP	Yes
Remote Start/ Cycle Monitor	Yes
Energy Monitoring	Yes
Tub Clean Coach	Yes
MOTOR	
Motor Type	Inverter Direct Drive Motor
Axis	Horizontal
MATERIALS AND FINISHES	
NeveRust® Stainless Steel Drum	Yes
Cabinet	Painted Steel
Control Panel	X (Cabinet Cover One Piece)
Top Plate	VCM
Door / Rim	Glass / Chrome
Door Cover	Tempered Glass Door
All Available Color	Brushed Black Steel (B)
POWER SOURCE	
Ratings	UL Listed
Electrical Requirements	120V, 12 Amps
Type	Electric
Plug	Included
Plug Type	3 Prong
OPTIONS / ACCESSORIES	
Pedestal	WDP8B
Pedestal (WxHxD)	29 x 13 5/8" x 29 1/2" (44 3/4" D with door open)
LG Sidekick® Pedestal Washer	WD405CB
LG Sidekick® Pedestal Washer (WxHxD)	29" x 14 1/8" x 30 7/8" (52 3/4" with drawer open)
Stacking Kit	Not Stackable
DIMENSIONS	
Product (WxHxD)	29" x 40 3/4" x 31 1/8"
Depth with Door Open	54 5/16" D
Carton (WxHxD)	31 3/8" x 44 3/4" x 33 3/4"
Weight (Product/Carton)	263lbs. / 280 lbs.
LIMITED WARRANTY	
Parts and Labor	2 Year
Direct Drive Motor	10 Years
Drum	3 Years
UPC CODE	
WM9998HBA	195174129319

© 2025 LG Electronics USA, Inc. All rights reserved. "LG Life's Good" is a registered trademark of LG Corp. All other product and brand names are trademarks or registered trademarks of their respective owners. Design, features and specifications are subject to change without notice. Non-metric weights and measurements are approximate. Some features may require Internet access. Content and services may vary by product and are subject to change without notice. 6/4/26

WM9998HBA

LG SIGNATURE Front Load Washer & Dryer Combo

IMPORTANT

QUICK INSTALL & CLEARANCES

For full installation directions/clearances please refer to the corresponding User Manual and Installation Guide.

DIMENSIONS	
A	54 5/16" (138cm)
B	31 1/8" (79cm)
C	4" (10cm)
D	1" (2.5cm)
E	29" (73.7cm)
F	12.25" (31.1cm)
Product Dimentions (in) (W x H x D)	29" x 40 3/4" x 31 1/8"
Carton Dimentions (in) (W x H x D)	31 3/8" x 44 3/4" x 33 3/4"
ENERGY	
ENERGY STAR® Most Efficient	Yes
ENERGY STAR® Qualified	Yes
IMEF	3.2
IWF	2.6
CEF	7.6
POWER SOURCE	
Ratings	UL Listed
Electrical Requirements	120V, 12 Amps


CONNECTING THE WATER INLET HOSES

To avoid the risk of costly water damage, purchase and install new water inlet hoses when installing the washer.


⚠ WARNING

- Do not overtighten the hoses or cross-thread the hose fittings. Overtightening or cross-threading can damage the valves or couplings, resulting in leaking and property damage.
- Do not reuse old hoses. Use only new hoses when installing the washer. Old hoses could leak or burst causing flooding and property damage. Contact an LG Customer Information Center for assistance in buying hoses.

1. Check the fittings and seals. Inspect the threaded fitting on each hose and make sure there is a rubber seal ❶ a in place in both ends of each hose to prevent leaking.

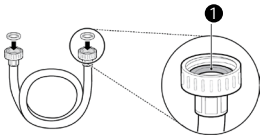


2. Connect the water supply hoses.
   - Connect the water inlet hoses to the hot and cold water faucets tightly by hand and then tighten another 2/3 turn with pliers.
   - Connect the blue hose to the cold water faucet and the red hose to the hot water faucet.

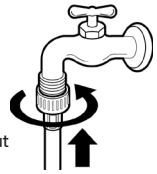


3. Flush out the inlet hoses.
   - After the hoses are connected, turn on the water faucets and flush out any foreign substances such as dirt, sand, or sawdust. Foreign substances can damage washer inlets and lead to leakage.
   - Let the water drain into a bucket, and check the water temperature to make sure you've connected the hoses to the correct faucets.



4. Attach the inlet hoses to the back of the washer.
   - Attach the hot water inlet hose to the hot water inlet on the back of the washer. Attach the cold water inlet hose to the cold water inlet on the back of the washer.
   - Tighten the fittings securely. Turn on both faucets all the way and check for leaks at both ends of the hoses.

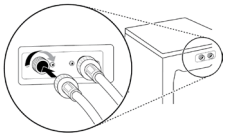

PRODUCT DIMENSIONS

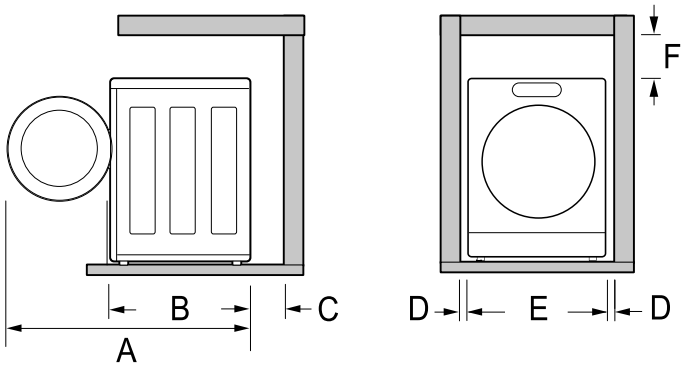

CHOOSING THE PROPER LOCATION

Check the following requirements for the install location before installing the washer.

- Allow for sufficient space between the walls and the washer for installation.
- Make sure that the floor is clean, dry and free of dust, dirt, water and oil so the leveling feet cannot slide easily. Leveling feet that can move or slide on the floor can contribute to excess vibration and noise.
- If the floor has too much flex, reinforce it to make it more rigid. If the floor is not solid, it may cause severe vibration and noise.
- The power outlet must be within 60 inches (1.5m) of either side of the washer.
- Position the washer so that the outlet and plug are easily accessible.
- Do not overload the outlet with more than one appliance.

CONNECTIONG THE DRAIN HOSE


Connect the drain hose to either a standpipe or laundry tub.

⚠ WARNING

- The drain hose should always be properly secured. Failure to properly secure the drain hose can result in flooding and property damage.


Using a Standpipe to Drain

1. Clip the end of the hose into the elbow bracket.
   - Connect the elbow bracket ❶ within 4 inches (10 cm) of the end of the drain hose. If the drain hose is extended more than 4 inches (10 cm) beyond the end of the elbow bracket, mold or microorganisms could spread to the inside of the washer.
2. Insert the end of the drain hose into the standpipe.
3. Use the provided tie strap ❷ to secure the drain hose in place.
4. If the water valves and drain are built into the wall, fasten the drain hose to one of the water hoses with the provided tie strap ❸ (ribbed side on inside).

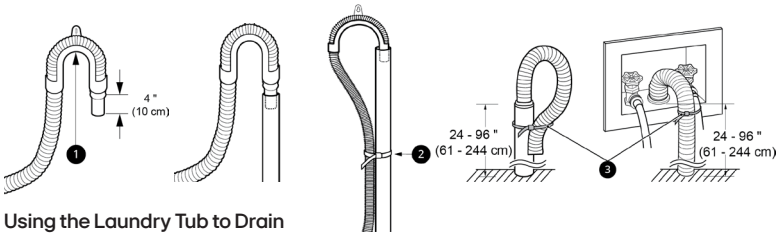

Using the Laundry Tub to Drain

1. Clip the end of the hose into the elbow bracket.
   - Connect the elbow bracket ❶ within 4 inches (10 cm) of the end of the drain hose. If the drain hose is extended more than 4 inches (10 cm) beyond the end of the elbow bracket, mold or microorganisms could spread to the inside of the washer.
2. Hang the end of the drain hose over the side of the laundry tub.
3. Use the provided tie strap to secure the drain hose in place.

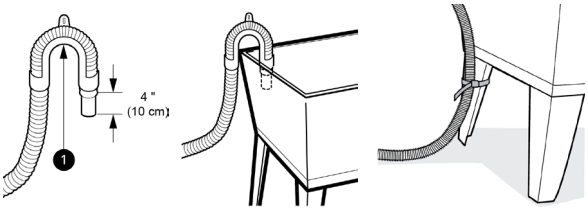

© 2025 LG Electronics USA, Inc. All rights reserved. "LG Life's Good" is a registered trademark of LG Corp. All other product and brand names are trademarks or registered trademarks of their respective owners. Design, features and specifications are subject to change without notice. Non-metric weights and measurements are approximate. Some features may require Internet access. Content and services may vary by product and are subject to change without notice. 6/4/26